

## GENERAL INFORMATION

 
### Product Support

Product support shall be provided by VIO as long as this product is still under warranty. VIO is not obliged to provide any repairs/ replacement on defects and damages caused by improper installation, improper operation, wrongful cleaning agents that deteriorate the surface appearance, force majeure and/or modifications made by user or third party.

### Corrosion Protection

Do not expose luminaire to corrosive agents (e.g. salt, acid, chemical & cleaning agents) during installation or cleaning. These agents may cause corrosion on the luminaire.

### Sizing Variation



Product	A	B	C
CHASER	166	60	135

*All measurements are in millimeters.*

### Cleaning and Care


Before cleaning, disconnect the luminaire from main supply and allow it to cool. Clean the external surface using lint free cloth with alcohol-free and non-abrasive cleaning agent.

### Ambient Condition

LED luminaire performs best in an ambient temperature of 25°C (+5°). High ambient temperature may reduce the lifespan and efficiency of the LED driver and luminaire.



## CHASER

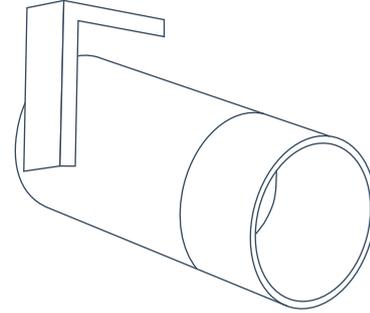

### Installation Manual and Safety Instruction


Please read the installation manual carefully before commencement of installation.

Before carrying out any installation, please ensure that all power is switched off and disconnected from the main power supply.


This product must be installed by a qualified installer under local regulations.

The light source of the luminaire is not replaceable. When the light source reaches its end of life, the whole luminaire shall be replaced.


1

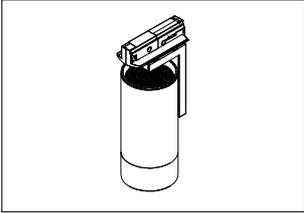


2

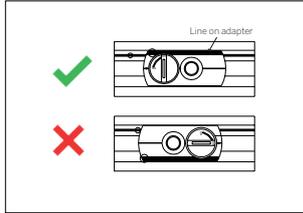

3

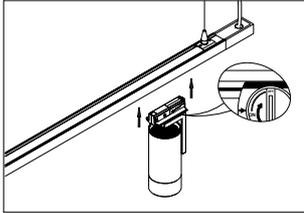

4

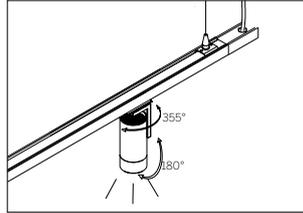

## INSTALLATION INSTRUCTIONS

### CHASER

1. Before installation or servicing, turn off and disconnect from main power supply.
2. When mounting the luminaire, please ensure that the extra line on the track adapter is aligned with the line on the track installed as shown in picture 2.
3. Upon alignment of track adapter to the track, turn the power knob 90° clockwise until the word 'ON' reaches the arrow with a 'click' sound.
4. To adjust the light, rotate or tilt the lamp head to your desired angle.